

KNOW YOUR Dr. AEROGUARD

+ SCPR300



Vita-Ion

• VITA-ION

On pressing the button the Vita-Ion generator turns on, making the air you breathe not just pure but healthy.



Mode

• SPEED MODE

Once the device is running you can select your desired speed depending on the felt level of pollution in the room. Press the Mode button to put the machine on "Speed 1", "Speed 2", "Speed 3". The indicators will light up depending on the speed mode selected. It is recommended that you put the machine on "Speed 2" mode at the start. The high speed would help clear the room of all pollutants faster if the machine has not been running for a while. Press the Mode button to put the machine on 'Auto'. The air purifier will automatically adjust the mode speed depending on the sensor data.



Sleep

• SLEEP MODE

Pressing the sleep button puts the device into the sleep mode.

KNOW YOUR Dr. AEROGUARD

+ SCPR700



Speed

• MANUAL MODE

You can manually change the speed of the air purifier by simply pressing the button. The maximum speed is 5 in manual mode. Pressing the button again on speed 5 lowers the purifier back to speed 1.



• VITA-ION

On pressing the button the Vita-Ion generator turns on, making the air you breathe not just pure but healthy.



• TIMER

The air purifier has multiple timer settings and you can set a time for the purifier to shut down. The indicator shows the timing set by you. The maximum timing you can set is 8 hours.



• FILTER LIFE-LIGHT

When the machine is connected to the power source, the Filter Life-Light will blink. Press the power button to switch the machine ON. The Filter Life-Light will stop blinking once the machine is turned ON. If it continues blinking, it means the user needs to replace the filter. Upon replacing the filter, press the Vita-Ion button for 3-5 seconds to reset the filter life. Once the Filter Life-Light stops blinking after resetting, it indicates that the filter life has been reset successfully.





• SENSOR LIGHT

On pressing the power button, the air purifier starts and the sensors are in preparation. The sensor light turns ON, indicating that the sensors are working.

KNOW YOUR Dr. AEROGUARD

+ SPCR300

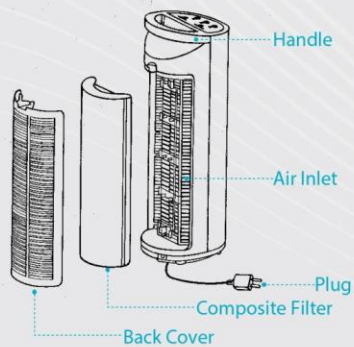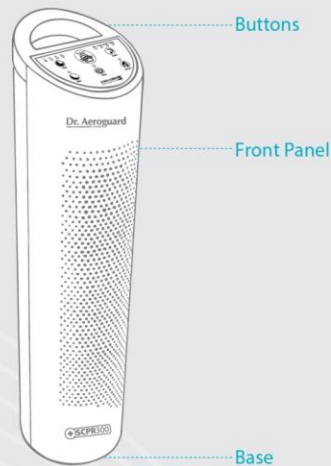


KNOW YOUR Dr. AEROGUARD

+ SPCR300

GETTING STARTED

The SPCR 300 is designed for easy plug and play. Before you start you need to reinstall the Composite filter by opening the upper plates and then removing their plastic wrappings carefully. Then, all you need to do is plug the power adaptor into the power source and press the Power button for clean, pur air.

OPERATING SPCR 300

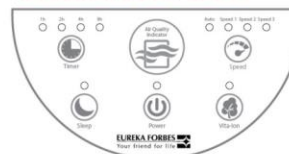

• POWER

When the device is unplugged, no lights are on. Switch on the purifier and then press the Power to start it. The "Air Quality" indicator will light up, showing the quality of the air in the room. The table below indicates what each colour stands for:

COLOUR	BLUE	ORANGE	RED
Air Quality	Good	Moderate	Bad



• TIMER

This purifier has 8 timer settings (1-8 hours). Press the timer button once. Indicator in front of 1h will light up. This means that the purifier is set for 1 hour. Press the button again and indicator in front of 2h lights up, indicating that the purifier is set for 2 hours. Press the button thrice and both 1h & 2h indicators light up. This means that the purifier is now set for 3 hours. Continue the same to set the purifier for 4, 5, 6, 7 and 8 hours.